

| | | | |
|---|---|-------------|---|
|  | MAINTENANCE JOB CARD 维修工作卡 | |  |
| LOC/维修地: | CUSTOMER/客户: | 200121-01-1 | |

| | | | |
|---------------|----------------|----------------|-----------|
| A/C REG/飞机注册号 | A/C MODEL/飞机机型 | ENG TYPE/发动机型号 | FSN/机队序列号 |
| | A320 | | |

| | | | |
|-------------------|-------------|----------|----|
| JOB CARD NO./工卡号: | 200121-01-1 | REV./版本: | R0 |
| TITLE 标题 | | | |

| | | |
|---------------|----------------------|-----------------------|
| ZONE/区域 | REF DOC/参考文件 | REV./版本 |
| 121122 | AMM:249200-100-004-A | Rev:R0 |
| RAISED BY/编制者 | CHECKED BY/审核人 | APPROVED BY/批准者 |
| | | DATE/日期 2025-04-06 |

| | | |
|--------------------|-----------|---------|
| NRC RECORD/非例行工卡记录 | | |
| CARD SIGN OFF/完工签署 | DATE/完工日期 | M.H./工时 |

任务 TASK 24-92-00-100-004-A

**** ON A/C:ALL**

1. Reason for the JobReason for the Job

(Refer to the MPD TASK: 200121-01)

(参考 : Refer to the MPD TASK: 200121-01)

CLEANING OF EWIS INSTALLED IN THE FORWARD AVIONIC COMPARTMENT (ONLY IF CONTAMINATED)(EWIS)

CLEANING OF EWIS INSTALLED IN THE FORWARD AVIONIC COMPARTMENT (ONLY IF CONTAMINATED)(EWIS)

注意 NOTE : This is an EWIS (Electrical Wiring Interconnection System) procedure. EWIS is defined in ESPM 20-33-11.
This is an EWIS (Electrical Wiring Interconnection System) procedure. EWIS is defined in ESPM 20-33-11.

2. Job Set-up InformationJob Set-up Information

- A. Fixtures, Tools, Test and Support Equipment
Fixtures, Tools, Test and Support Equipment

| REFERENCE REFERENCE | QTY QTY | DESIGNATION DESIGNATION |
|------------------------|------------|--|
| No specific | 1 | ACCESS PLATFORM 2M (6 FT) - ADJUSTABLE |
| No specific | 1 | ACCESS PLATFORM 2M (6 FT) - ADJUSTABLE |

- B. Work Zones and Access Panels
Work Zones and Access Panels

| ZONE/ACCESS ZONE/ACCESS | ZONE DESCRIPTION ZONE DESCRIPTION |
|----------------------------|--------------------------------------|
| 121 | AVIONICS COMPARTMENT |
| 121 | AVIONICS COMPARTMENT |
| 122 | AVIONICS COMPARTMENT |

| ZONE/ACCESS ZONE/ACCESS | ZONE DESCRIPTION ZONE DESCRIPTION |
|--|--|
| 122 | AVIONICS COMPARTMENT |
| 121AF , 121AL , 121BF , 121CF , 122BF , 811 121AF , 121AL , 121BF , 121CF , 122BF , 811 | |

工卡标题：

JC Title：

3. Job Set-upJob Set-up

子任务 Subtask 24-92-00-010-092-A

A. Get Access

Get Access

(1). Put an ACCESS PLATFORM 2M (6 FT) - ADJUSTABLE in position.

Put an ACCESS PLATFORM 2M (6 FT) - ADJUSTABLE in position.

(2). Open the access doors:

Open the access doors:

• 121AL

121AL

• 811 (Ref: AMM TASK 52-41-00-010-002).

811 (参考 : AMM TASK 52-41-00-010-002).

(3). Remove the forward avionic-compartment floor-panels 121AF 121BF 121CF and 122BF (Ref: AMM TASK 53-12-13-000-001).

Remove the forward avionic-compartment floor-panels 121AF 121BF 121CF and 122BF (参考 : AMM TASK 53-12-13-000-001).

| | | | |
|------------------|--|-------------------|--|
| 工作者/日期 Per.By | | 检查者/日期 Insp.By | |
|------------------|--|-------------------|--|

子任务 Subtask 24-92-00-862-080-A

B. De-energize the aircraft electrical circuits

De-energize the aircraft electrical circuits

(Ref: AMM TASK 24-41-00-862-002).

(参考 : AMM TASK 24-41-00-862-002).

| | | | |
|------------------|--|-------------------|--|
| 工作者/日期 Per.By | | 检查者/日期 Insp.By | |
|------------------|--|-------------------|--|

4. ProcedureProcedure**** ON A/C:ALL**(Ref: [Forward Avionic Compartment - Access](#))**** ON A/C:ALL**(Ref: [Forward Avionic Compartment - Cleaning Area - Zones 121-122](#))

子任务 Subtask 24-92-00-160-052-A

A. Cleaning of All Wiring Installed in the Forward Avionic Compartment (Only Contaminated Wiring)

Cleaning of All Wiring Installed in the Forward Avionic Compartment (Only Contaminated Wiring)

(1). Clean the wiring if there is dust, lint or hydraulic contamination (Ref: ESPM 2055000) .

Clean the wiring if there is dust, lint or hydraulic contamination(参考 : ESPM 2055000).

(a). On the AC/DC feeder routes: 4G, 5G and 6G.

On the AC/DC feeder routes: 4G, 5G and 6G.

(b). On the AC/DC power-distribution routes: 1P, 2P and 6P.

On the AC/DC power-distribution routes: 1P, 2P and 6P.

(c). On the flight control wiring.

On the flight control wiring.

工卡标题 :
JC Title :

- (d). On the engine control routes: 1S and 2S.
On the engine control routes: 1S and 2S.
- (e). On the other routes: 1M and 2M.
On the other routes: 1M and 2M.
- (f). On the audio route: 1R.
On the audio route: 1R.
- (g). On the coaxial cable routes: 4T, 3U and 4U.
On the coaxial cable routes: 4T, 3U and 4U.
- (h). On the generator excitation routes: 1E, 2E and 3E.
On the generator excitation routes: 1E, 2E and 3E.

| | | | |
|------------------|--|-------------------|--|
| 工作者/日期 Per.By | | 检查者/日期 Insp.By | |
|------------------|--|-------------------|--|

5. **Close-upClose-up**


子任务 Subtask 24-92-00-410-090-A

A. Close Access
Close Access

- (1). Make sure that the work area is clean and clear of tools and other items.
Make sure that the work area is clean and clear of tools and other items.
- (2). Install the forward avionics-compartment floor-panels 121AF 121BF 121CF and 122BF (Ref: AMM TASK 53-12-13-400-001).
Install the forward avionics-compartment floor-panels 121AF 121BF 121CF and 122BF (参考 : AMM TASK 53-12-13-400-001).
- (3). Close the access doors:
Close the access doors:
 - 121AL
121AL
 - 811 (Ref: AMM TASK 52-41-00-410-002).
811 (参考 : AMM TASK 52-41-00-410-002).
- (4). Remove the access platform(s).
Remove the access platform(s).

| | | | |
|------------------|--|-------------------|--|
| 工作者/日期 Per.By | | 检查者/日期 Insp.By | |
|------------------|--|-------------------|--|

工卡标题：
JC Title：

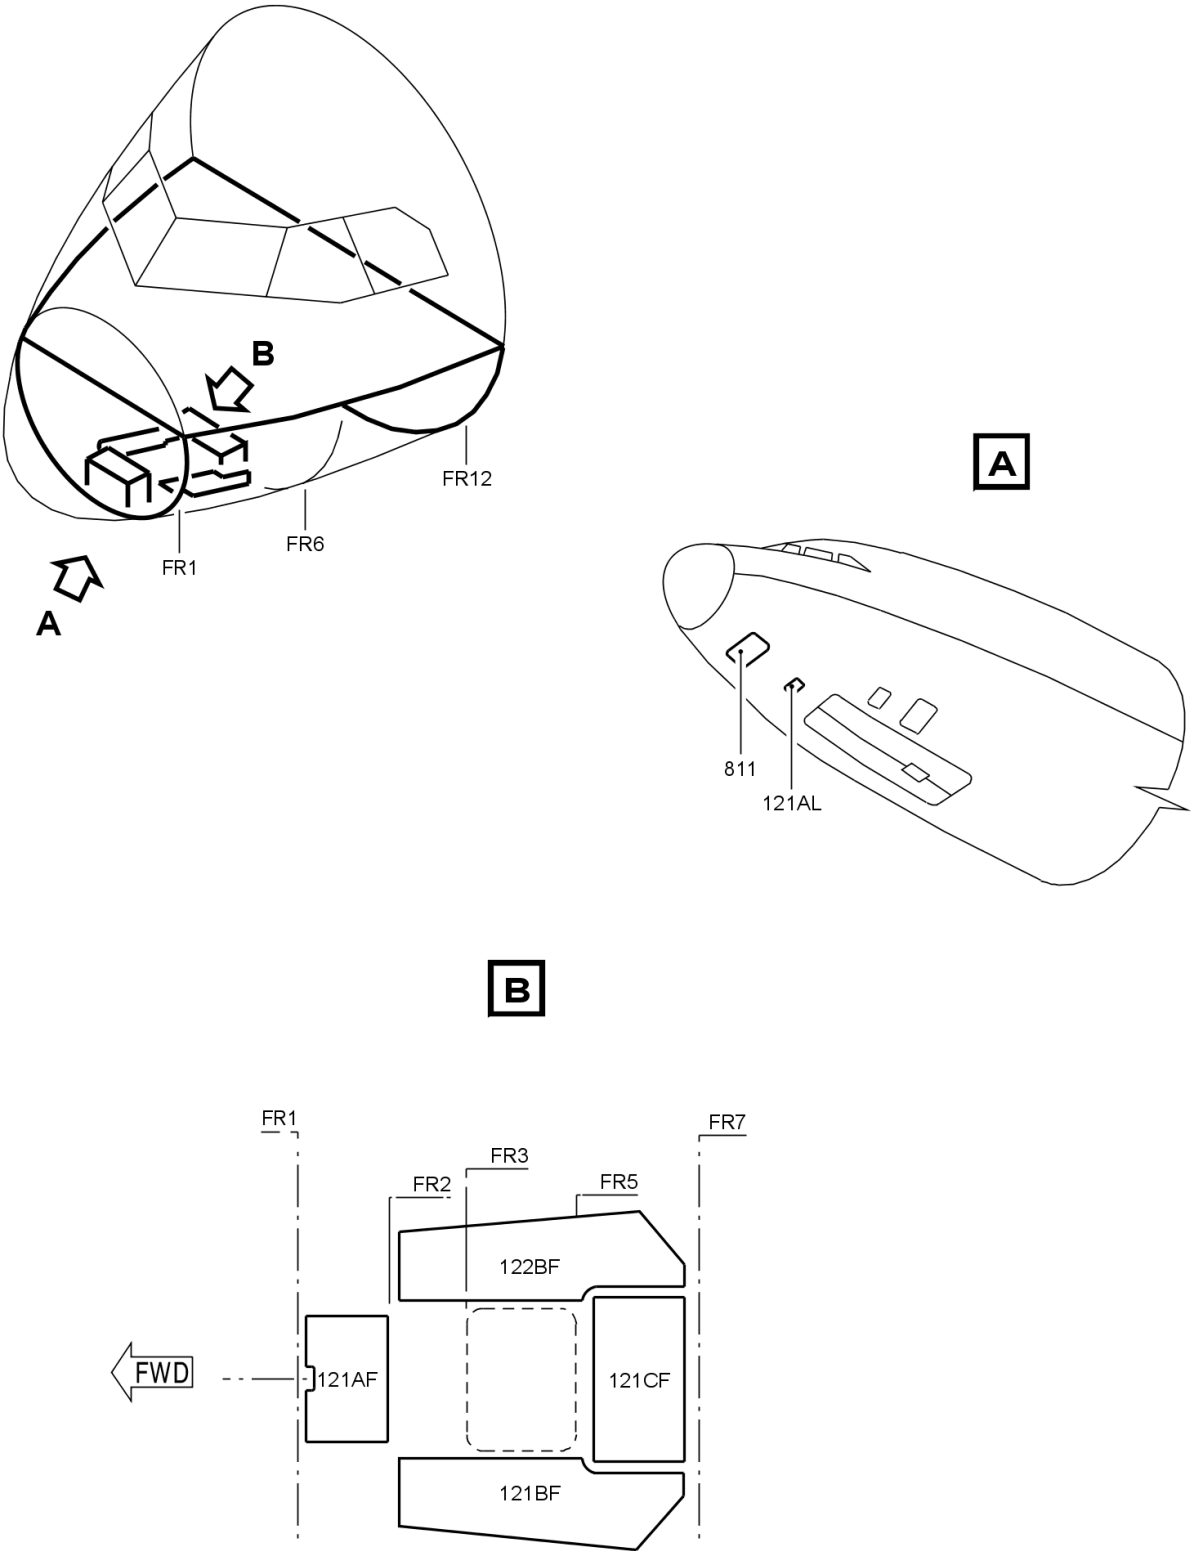


N_MM_249200_7_ALM0_01_00

Forward Avionic Compartment - Access


**** ON A/C:ALL**

工卡标题：

JC Title：

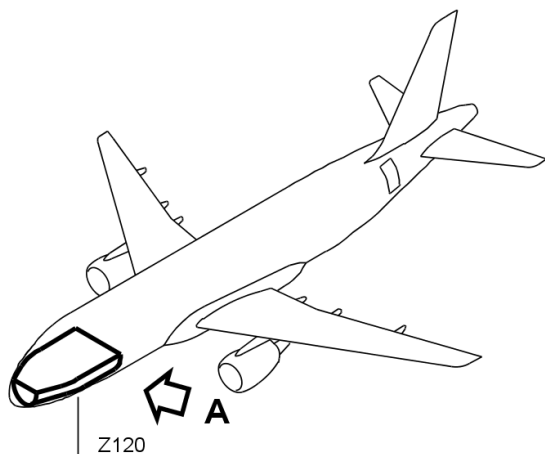

A

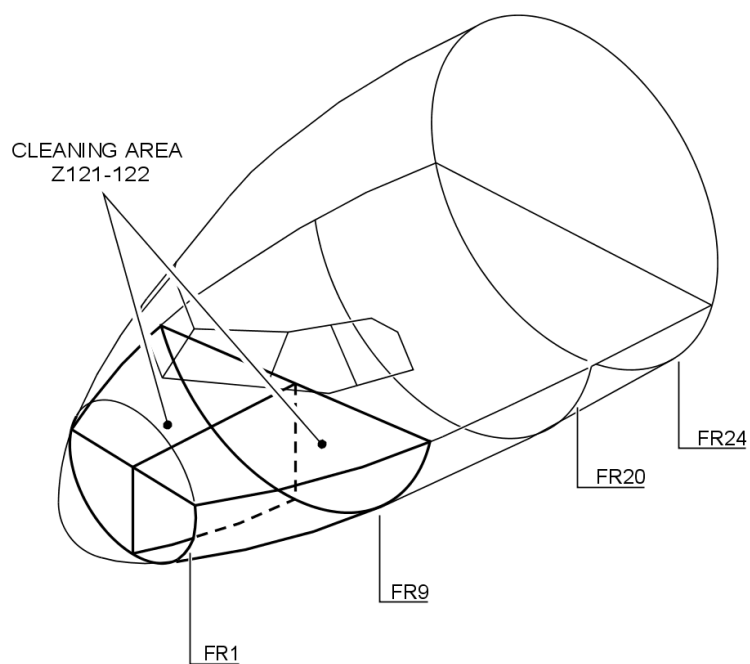

N_MM_249200_7_JLM0_01_00

Forward Avionic Compartment - Cleaning Area - Zones 121-122

**** ON A/C:ALL**